
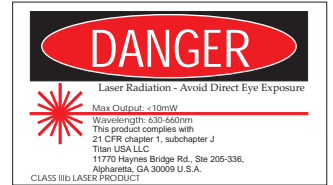


# LS68XX Series Laser Sight Instruction Manual

1. Unscrew battery cap and insert battery as shown in picture below and replace battery cap. Press the pressure switch pad to test the laser. Do not look into laser aperture when testing.
2. Install laser sight onto mount as directed on instruction included with mount. Be sure the lines on the mount and laser sight are aligned. If there are no lines, align the adjustment screws so that they are aligned top and bottom, and left and right for easier adjustment.
3. Unscrew the lens cap and locate the four adjustment screws. Loosen two screws across from each other before tightening. Avoid over tightening to prevent stripping screws. Use the adjustment screws to aim your laser sight. Only use the adjustment screws with battery installed.
4. Replace lens cap when done aiming the laser sight and place the pressure switch where it is convenient to use.

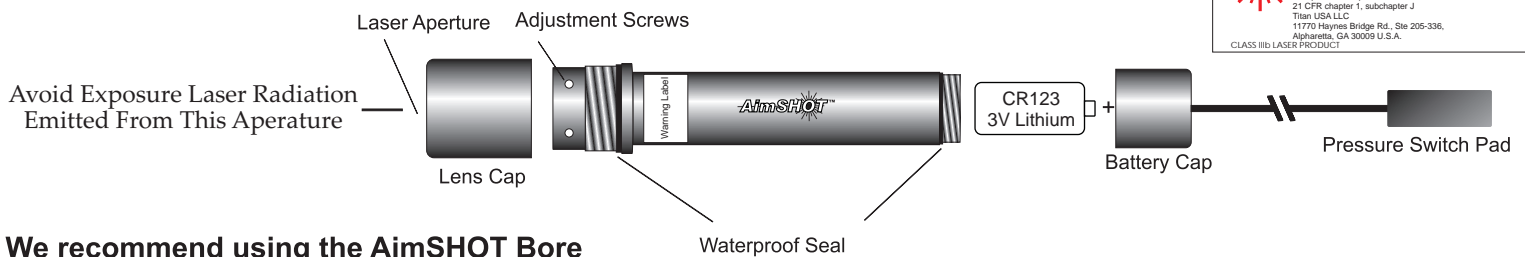

**We recommend using the AimSHOT Bore Sight with appropriate arbor for the easiest way to aim your laser sight.**

Optional coil cord for flashlight and laser sight available for shotguns.