

## COMPACT RAIL MOUNT LASER SIGHT INSTRUCTION MANUAL

### INSTALLATION:

1. ATTACH THE LASER SIGHT TO YOUR RAIL BY CHOOSING THE SCREW POSITION BEST SUITED FOR YOUR GUN THAT WILL ALLOW THE SIGHT TO BE AS CLOSE TO THE TRIGGER GUARD AS POSSIBLE AND TIGHTEN SCREW.

### OPERATION:

1. ON/OFF SWITCH: PRESS BUTTON ON LEFT REAR SIDE TO TURN ON / PRESS AGAIN TO TURN OFF
2. PRESSURE SWITCH: PLUG PRESSURE SWITCH AND SECURE PRESSURE PAD TO GUN WITH INCLUDED RUBBER BAND. PRESS PRESSURE PAD TO TURN ON, RELEASE TO TURN OFF. ON/OFF SWITCH MUST BE IN ON POSITION.

### ALIGNMENT:

1. TURN THE FOUR ALIGNMENT SCREWS LOCATED AROUND THE HEAD OF THE LASER SIGHT FOR HORIZONTAL AND VERTICAL ALIGNMENT. BE SURE TO LOOSEN ONE SIDE BEFORE TIGHTENING THE OTHER. WE RECOMMEND USING THE AIMSHOT BORE SIGHT WITH APPROPRIATE ARBOR FOR THE EASIEST WAY TO AIM YOUR LASER SIGHT. VISIT [WWW.AIMSHOT.COM](http://WWW.AIMSHOT.COM) FOR MORE INFORMATION.

### BATTERY REPLACEMENT:

1. SLIDE BATTERY CAP TOWARDS THE BACK AND FLIP OPEN. INSERT TWO LR44 BATTERIES AS MARKED INSIDE.

